

How to read my smart meter

How to read your Sprint 211 smart meter

Liberty 120

i-Credit 511



1. Press the config button repeatedly to scroll through the page options.
2. Stop at page 1.
3. Press the scroll button to scroll through the display options on page 1.
4. The cumulative value will be displayed in DISPLAY ID 004. This is the cumulative reading for consumption.
5. The cumulative value of the net solar export is shown as display ID 005.

Remember, when your new smart meter was installed, it started from 0, so your smart meter readings won't follow on from the last reading you took on your old meter.

Will the smart meter screen also show my solar export figures?

Yes

If you've got solar panels and export some of your energy through a feed in tariff just follow these simple steps to get your export figures.

1. Press the config button repeatedly to scroll through the page options.
2. Stop at page 1.
3. Press the scroll button to scroll through the display options on page 1.
4. The cumulative value will be displayed in DISPLAY ID 005. This is the cumulative reading for generation.

Remember, when your new smart meter was installed, it started from 0, so your smart meter readings won't follow on from the last reading you took on your old meter.

