

Guarantee

The Bristan Joy Care electric shower has a 2 Year parts* and 1 Year labour (subject to registration) guarantee.

(* 1 year parts guarantee for Commercial and Healthcare installations.)

This guarantee applies to products purchased within the United Kingdom or Republic of Ireland.

For full guarantee terms and conditions please see page 31 of the main Installation Instruction Manual or call Bristan Customer Services on 0844 701 6273.

BRISTAN

Bristan Group Ltd.
Birch Coppice Business Park
Dordon
Tamworth
Staffordshire
B78 1SG
Web: www.bristan.com
Email: enquire@bristan.com
A Masco Company


UM ES JOY CARE Issue: D4

BRISTAN

RNIB
approved

BEAB
CARE
Intertek

Joy Care Electric Shower User Guide

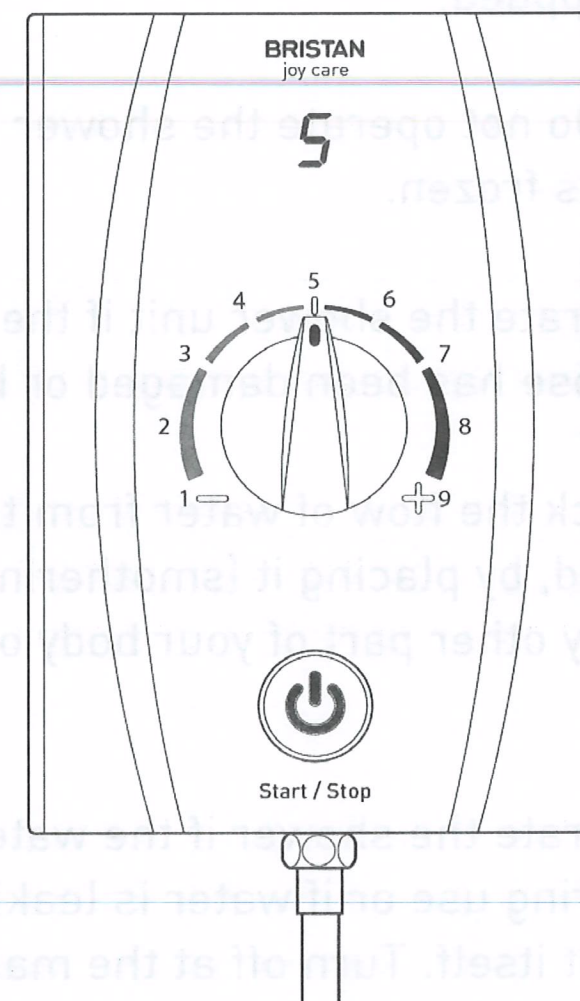

Please keep this booklet for future reference.

Audio and Braille copies of this guide are available on request via Bristan Customer Services on 0844 701 6273.

Important Information

- This guide assumes the shower was installed in accordance with the main installation instruction manual supplied.
- Warning: Do not operate the shower unit if you suspect it is frozen.
- Do not operate the shower unit if the showerhead or spray hose has been damaged or blocked.
- Do not block the flow of water from the showerhead, by placing it (smothering it) on your hand or any other part of your body or foreign object.
- Do not operate the shower if the water stops flowing during use or if water is leaking from the shower unit itself. Turn off at the mains electrical supply and refer to the Troubleshooting section (page 30) of the main Installation Instruction Manual or contact an engineer or Bristan Customer Services on 0844 701 6273.

Cleaning

General Cleaning

Before attempting to clean your shower unit you must switch off the power at the isolating switch. Do not remove the cover.

Do not use abrasive cleaners or solvents to clean this unit. The shower unit and accessories should be cleaned with a soft, clean, damp cloth.

Cleaning the Showerhead

Simply rub your fingers across the rubber spray jets regularly and before you turn the shower on to remove any scale or debris.

The hardness of the water in your area will determine how often you should clean your showerhead. Build-up of scale in particularly hard water areas combined with constant use means you may need to clean your showerhead once a week. To ensure continued performance of your electric shower the showerhead needs to be regularly descaled.

Important Information

- Do not crush or kink the shower hose, this could damage the hose, cause leaks and activate the pressure relief device (PRD).
- Before using the shower ensure the temperature is at a suitable temperature with your hand before stepping under the water. There will be a short delay of a few seconds between selecting the required temperature to the shower reaching the temperature.
- This shower has an installer settable audible feedback feature.
- If an error code appears on the front cover or (if enabled) a warning tone is heard, an engineer should refer to the Installation Instruction, or contact Bristan Customer Services on 0844 701 6273.
- **Important:** The shower unit must be switched off at the isolating switch (pull cord) when not in use.

Operating the Shower

To Start the Shower


Press the Start / Stop button once and (if enabled) a short beep will be heard. The blue light will flash until the shower reaches the desired temperature and (if enabled) a further two beeps will also be heard. (This is the Warm Up feature)



Start / Stop

Adjusting the Temperature

The central Temperature control rotates clockwise moving the black temperature setting pointer from 1 [cooler] to 9 [warmer]. Blue to red markings and raised minus and plus signs also dictate the direction of control. The Temperature setting will be displayed above the control. In BEAB Care installations the max temperature of 41°C will be reached at position 5.

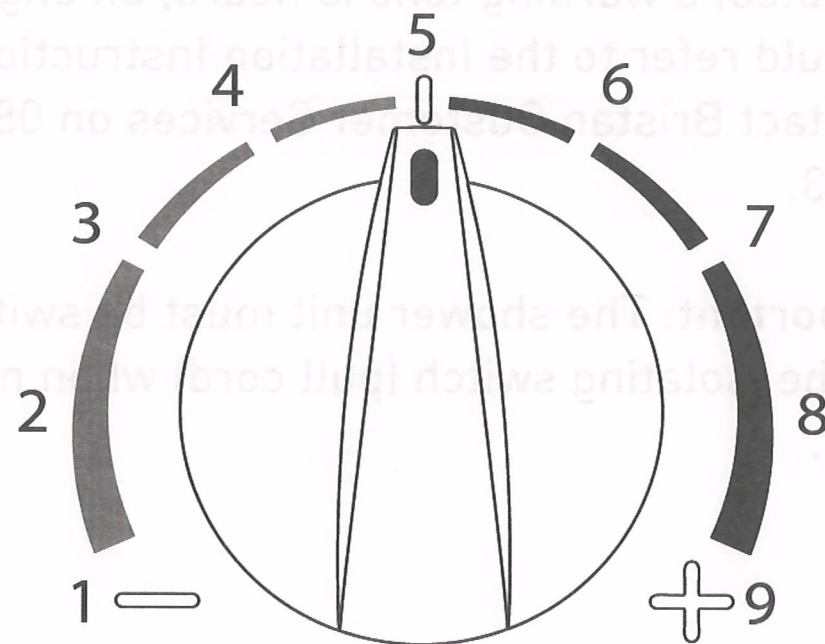

Operating the Shower

To stop the shower

Press the Start / Stop button once and (if enabled) a long beep will be heard.



Start / Stop

Phased Shut Down

The shower will continue to flow for a short period of time to empty the heater on shut down. The light will flash and (if enabled) short beeps will be heard until the shower has turned off.

Time-Out Function

This will ensure the shower turns off after a set period of time in case the user doesn't turn the shower off manually. The warning (if enabled) is three short beeps followed by a 2 second pause, repeated for a minute, before the shower times out.

Fault Warning

If a fault occurs with the shower an error code is displayed on the shower and (if enabled) a continuous tone will be heard.