C3504 Size: A4

deta^{*}

Instruction leaflet

Door Bell

C3504

To be read in full before installation and kept for future reference

Safety Instructions	Installation Instructions
<image/>	 Switch off the electricity at the fuse box before proceeding with the installation Remove the front cover of the doorbell by removing the screw underneath Mount the back section of the doorbell to the wall using fixing screws Connect a 240V supply to the live and neutral terminals Connect appropriate bell wire (not supplied) to the unbiased terminals inside the doorbell (see diagram), and route to the position of the bell push Remove the front cover of the bell push Connect the other end of the bell wire to the terminals of the bell push Bell push seal must be fitted to the rear of the bell push, with the cable routed through "+" shaped slot. Failure to fit this seal will affect the guarantee. Secure the bell push in its position Replace the front cover of the bell push Replace the front cover of the doorbell, and secure in place with the screw Switch on the electricity at the fuse box by replacing the relevant fuse or switching on the circuit breaker after completing the installation.

Specification

Supply Voltage Dimensions (mm)	240V~	Door Bell Type	Mechanical Sounder
	128(H), 128 (W), 44 (D)	Kit Contents	Door Bell, Bell Push and Bell Push Seal
S06 INS 0017 V1.1 03/20 NPD 0547	CE RR Z		Deta Electrical Company Ltd UK: Panattoni Park Luton Road Chalton Beds. LU4 9TT EU: Unit 16 Ashbourne Ind. Est. Ashbourne Co. Meath A84 W972 Ireland deta.co.uk Technical Helpline: +44(0)1582 544 548