

Using your Underfloor Heating

This sheet is designed to provide customers with information to help operate the underfloor heating effectively.



This image shows the functions on the thermostat.

KEY FEATURES - Symbol 4 (flame) – indicates the system is calling for heat. Symbol 3 (frost mode) will need to be off for heating to come on.

More information can be found in the simple manual provided in your Home User Guide that can also be found [HERE](#)

There are also a series of short videos available on YouTube to help you operate your underfloor heating.

Take a look at them at the link [HERE](#)

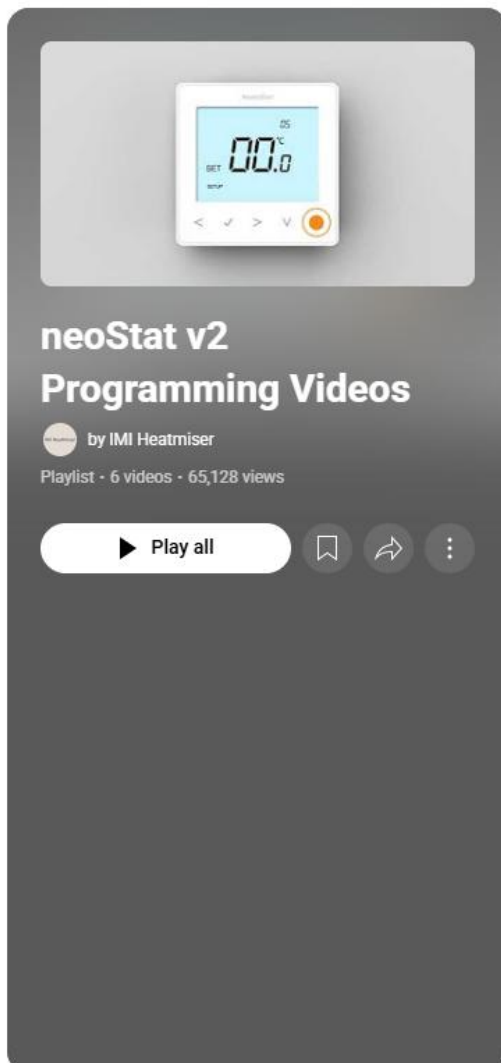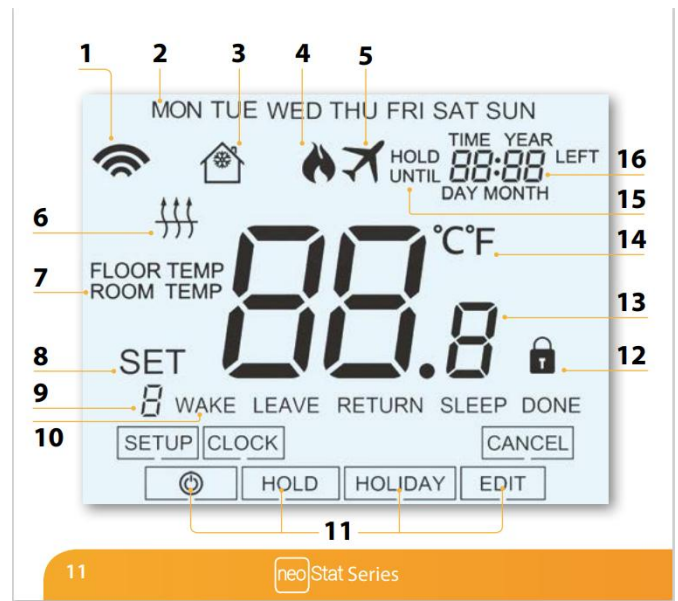

- 1  **Using Optimum Start on your neoStat v2**
IMI Heatmiser • 25K views • 7 years ago • 0:49
- 2  **Using the Hold Feature on your neoStat v2**
IMI Heatmiser • 19K views • 7 years ago • 0:53
- 3  **Resetting your neoStat v2**
IMI Heatmiser • 45K views • 7 years ago • 0:33
- 4  **Programming Comfort Levels on the Heatmiser neoStat v2**
IMI Heatmiser • 142K views • 6 years ago • 2:19
- 5  **Setting the Holiday on your neoStat V2**
IMI Heatmiser • 7.9K views • 6 years ago • 0:56
- 6  **Enabling Key Lock on the neoStat v2**
IMI Heatmiser • 11K views • 6 years ago • 0:46